
 
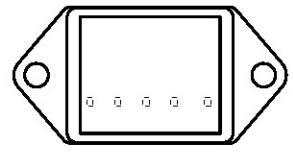



IVR-6XXX



IVR-601



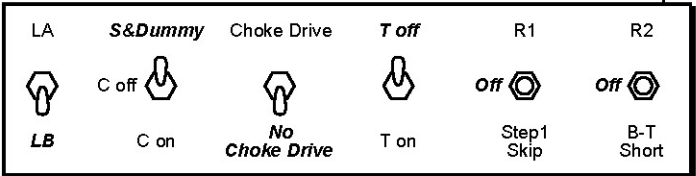


STEP1 : Charge Lamp
 STEP2 : Choke Drive
 Regulated voltage **28.0V~29.1V**
 ※Connect Cable assy2. to IG and L terminals.
 Please refer to the Connection / Setting page.

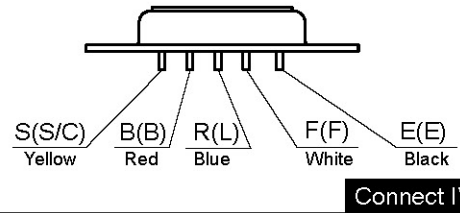

Connect IVR


 

IVR-602

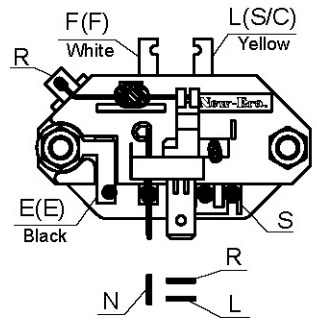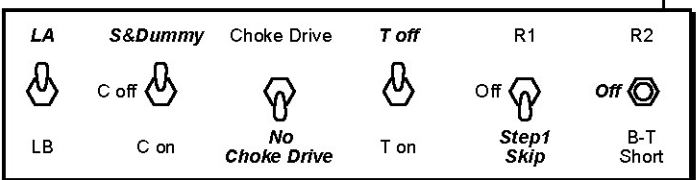

STEP1 : Skip No Check
 STEP2 : Choke Drive
 Regulated voltage **28.0V~29.1V** ■

Connect IVR


 

IVR-603

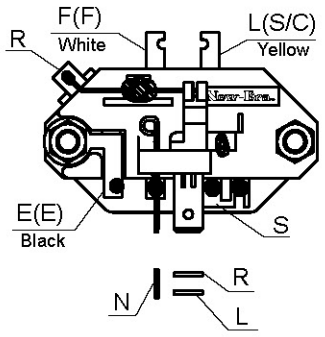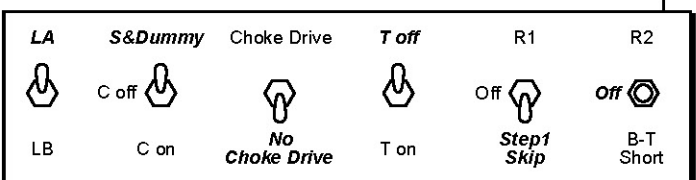

STEP1 : Skip No Check
 STEP2 : Choke Drive
 Regulated voltage **28.0V~29.1V** ■

Connect IVR

 IVR-604

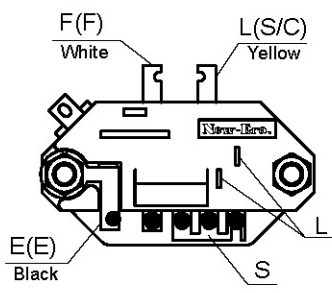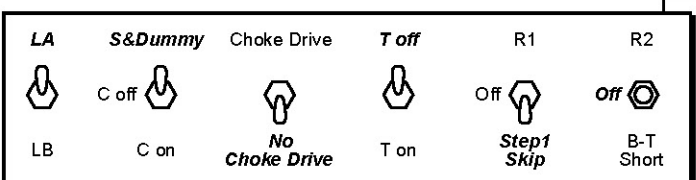

STEP1 : Skip No Check
 STEP2 : Choke Drive
 Regulated voltage **28.0V~29.1V** ■

Connect IVR

LA	S&Dummy	Choke Drive	T off	R1	R2
	C off			Off	Off
LB	C on	No Choke Drive	T on	Step1 Skip	B-T Short

STEP1 : Skip No Check

STEP2 : Choke Drive ○

Regulated voltage **28.0V~29.1V**■

Connect IVR

IVR-605

LA	S&Dummy	Choke Drive	T off	R1	R2
	C off			Off	Off
LB	C on	No Choke Drive	T on	Step1 Skip	B-T Short

STEP1 : Skip No Check

STEP2 : Choke Drive ○

Regulated voltage **28.0V~29.1V**■

Connect IVR

IVR-606

LA	S&Dummy	Choke Drive	T off	R1	R2
	C off			Off	Off
LB	C on	No Choke Drive	T on	Step1 Skip	B-T Short

STEP1 : Charge Lamp

STEP2 : Choke Drive ○

Regulated voltage **28.0V~29.1V**■

Connect IVR

IVR-621

LA	S&Dummy	Choke Drive	T off	R1	R2
	C off			Off	Off
LB	C on	No Choke Drive	T on	Step1 Skip	B-T Short

STEP1 : Charge Lamp

STEP2 : Choke Drive ○

Regulated voltage **28.0V~29.1V**■

Connect IVR

IVR-631