
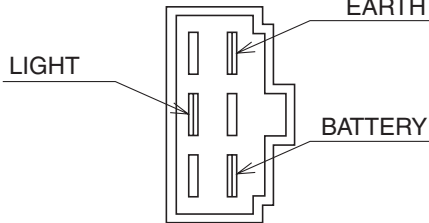 

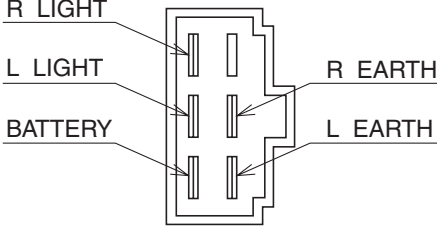 

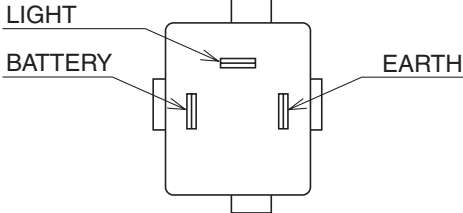 

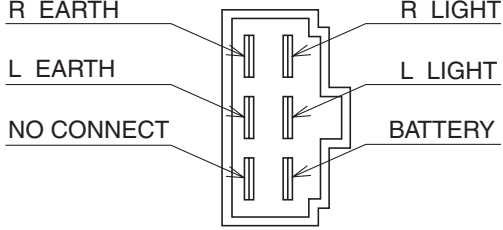 

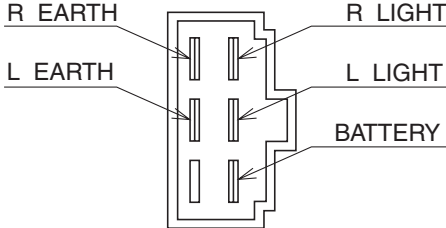 

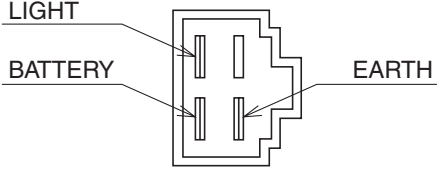 

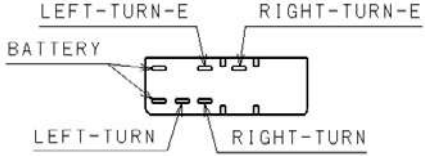 

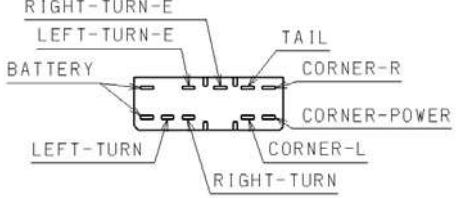 



## FLASHER RELAYS

New-Era No.	Ref.No.	Application
<b>FLS-101</b>  <b>AC24V</b>	<b>8-97360084-1</b> (066500-5651)	<b>INDICATOR RELAY (FLASHER RELAY)</b> <b>ISUZU</b> ELF NKR,NPR 
<b>FLS-102</b>  <b>AC24V</b>	<b>MC848790</b> (066500-2081) <b>MC849878</b> (066500-2080) (066500-2510) (066500-3040) (066500-3570) 819801650	<b>mitsubishi FUSO</b> <b>HINO</b> 
<b>FLS-103</b>  <b>AC24V</b>	<b>MB302374</b> (066500-1800)	<b>mitsubishi</b> <b>CANTER</b> 
<b>FLS-104</b>  <b>AC24V</b>	<b>1-83470062-0</b> <b>1-82550299-0</b> (066500-3860) (068300-0460)	<b>ISUZU</b> <b>FORWARD</b> EB03 
<b>FLS-105</b>  <b>AC24V</b>	<b>1-83470052-0</b> (066500-3251)	<b>ISUZU</b> ELF NKR,NKS,NPR,NPS 

## FLASHER RELAYS

New-Era No.		Ref.No.	Application
<b>FLS-106</b> 	<b>AC24V</b>	1-83470035-0 (066500-0682)	<b>INDICATOR RELAY (FLASHER RELAY)</b> <b>ISUZU</b> ELF NKR,NKS,NPR,NPS 
<b>FLS-107</b> 	<b>AC12V</b>	MC867672 (066500-3301)	<b>MITSUBISHI</b> CANTER FE 93~ 
<b>FLS-108</b> 	<b>AC12V</b>	MC857354 MC857345 MK327447 (066500-3132) (066500-3133) (066500-4540)	<b>MITSUBISHI</b> CANTER FE 96~  <p>※12TERMINAL 10PIN</p>
<b>FLS-151</b> 	<b>AC24V</b>	VF324K (NILES)	<b>UNIVERSAL TYPE</b> [TERMINAL] X : POWER(24V) P : INDICATOR L : LAMP